



Instructions for Use of Transfer Gears

1. Ensure vehicle is in H2 or H4 when driving on dry tarmac.
2. Shift from H2 to H4 and from H2 to H4L must be carried out:
 - * at less than 60mph:
 - * If 4WD indicator flashes and buzzes, slow down, or pull over and repeat the selection procedure.
3. If the 4WD indicator flashes and buzzes after shift operation, adjust driving speed, or reverse carefully.
4. Do not operate transfer gearbox when jacked up.
5. Shifting between H4L and L4L must be carried out:
 - *With clutch pedal depressed (on manual vehicles)
 - *At less than 5mph or when stationary
6. This vehicle is a part-time 4WD with a centre differential – please refer to owner's manual before towing.

Tyre change

All 4 tyres must be of the same make, size, rating and tread pattern.

Always check tyre pressures!